

Brass Art

— DISTINCTLY BRITISH —


FITTING INSTRUCTIONS

CABINET HARDWARE

IMPORTANT NOTES BEFORE FITTING

- Ensure you have tools suitable for correct installation, these include a tape measure, pencil, screwdriver, drill, spirit level, set-square.
- Always double check measurements before drilling any holes or pilot holes.
- Where necessary pre-drill pilot holes before drilling to avoid cracking or splitting of mounting surfaces.
- Do not remove any protective film from the product until it has been correctly fitted.
- If a fitting template is supplied, please ensure this is used to ensure accurate fitting.


BOLT-THROUGH (Product & Diagram for illustration purposes only)

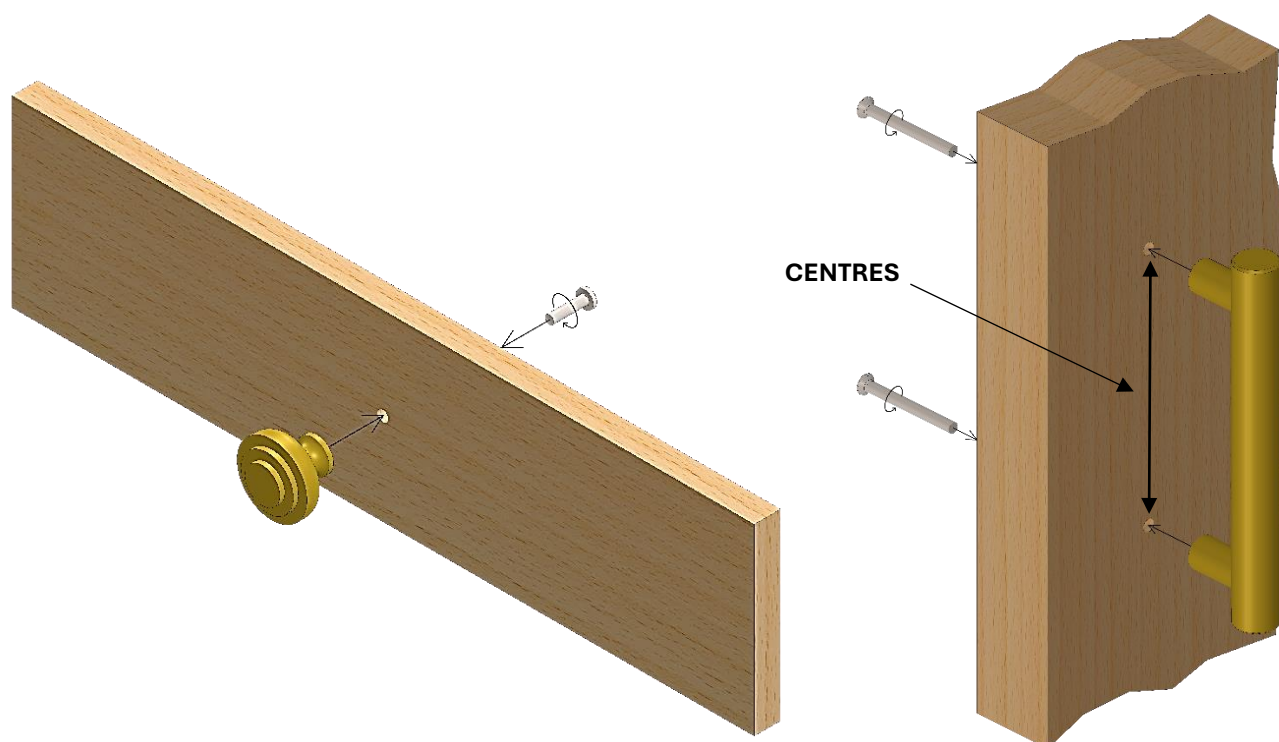

1. Mark the Position:
 - Decide where you want the product to be fitted.
 - Use a measuring tape and pencil to mark the desired position on the cupboard door or drawer front.
 - For cabinet pull handles (which have two fixing points) mark the centres on the cupboard door or drawer front – This is the distance between the bolts that attach to the product.
2. Drill the Holes:
 - Choose a drill bit that matches the diameter of the bolt supplied.
 - Drill a hole through the marked position from the front to the back.

- Some cupboard knobs have an anti-rotation pin on the bottom of the base to prevent the product from turning after fitting. If this is present, drill a small 1-2mm pilot hole to a depth of 2mm in the correct position.
3. Fit the Product:
 - Push the bolt through the hole from the inside of the cupboard door or drawer. Note that if break-off screws/bolts have been provided you will need to cut the bolt down to the correct size to ensure a suitable fit.
 - Align the product with the protruding bolt on the front.
 - Screw the product onto the bolt by hand or using a screwdriver, ensuring the anti-rotation pin (if present) sits in the pilot hole drilled in step 2.
 4. Tighten Securely:
 - Ensure the product is firmly in place but avoid overtightening as this may damage the mounting surface.
 - For square or oval products, align as preferred prior to tightening.
 5. Check & Adjust:
 - Test the product by pulling and twisting to ensure it is secure.
 - If needed, slightly loosen or tighten for the best fit.

FACE FIXED (Product & Diagram for illustration purposes only)

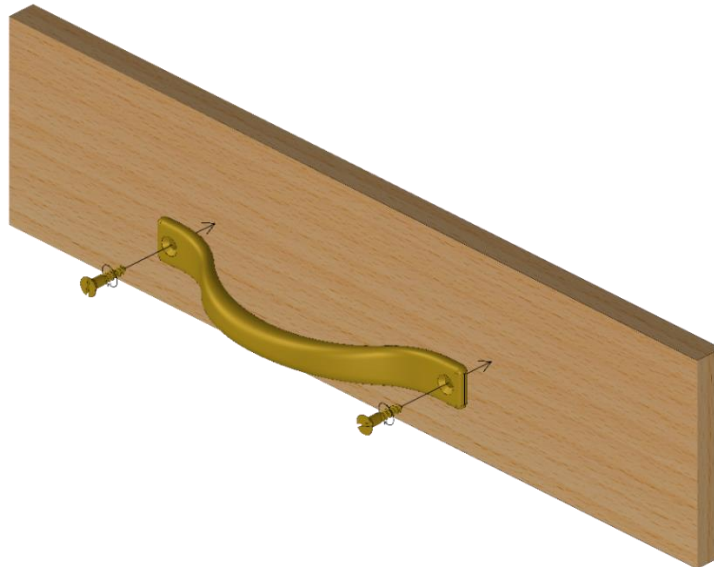

1. Mark the Position:
 - Decide where you want the product to be fitted.
 - Use a measuring tape and pencil to mark the correct position on the cupboard door or drawer front. Alternatively, offer the product up to the surface and mark the position through the fixing holes with a pencil.
2. Drill the Holes:
 - Choose a drill bit that matches the diameter of the screws supplied.
 - Drill a hole at the marked position to the same depth as the screws supplied.
3. Fit the Product:
 - Hold the product in place over the marked position.
 - Using a screwdriver, fix the screws through the front of the product and into the cupboard surface.
4. Tighten Securely:
 - Ensure the product is firmly attached but avoid overtightening to prevent damage to the mounting surface.
5. Check & Adjust:
 - Test the product by pulling gently to ensure it is secure.
 - If necessary, tighten or reposition for the best fit.

These instructions are to assist in the fitting of your cabinet hardware products. In certain instances, additional carpentry work may be required in order to install your hardware – In these cases it is important to seek professional or expert advice. If you are unsure about any aspect of these instructions please feel free to contact us for further basic guidance, however please be aware that we do not offer a fitting service and we do not accept responsibility for any associated costs incurred in the fitting of these products.

Our terms and conditions of sale can be viewed here: <https://brassart.com/terms-conditions/>