


## FITTING INSTRUCTIONS

### EDGE PULLS

#### IMPORTANT NOTES BEFORE FITTING

- Ensure you have tools suitable for correct installation, these include a tape measure, pencil, screwdriver, drill, spirit level, set-square.
- Always double check measurements before drilling any holes or pilot holes.
- Where necessary pre-drill pilot holes before drilling to avoid cracking or splitting of mounting surfaces.
- Do not remove any protective film from the product until it has been correctly fitted.
- If a fitting template is supplied, please ensure this is used to ensure accurate fitting.

FACE FIXED (Product & Diagram for illustration purposes only)

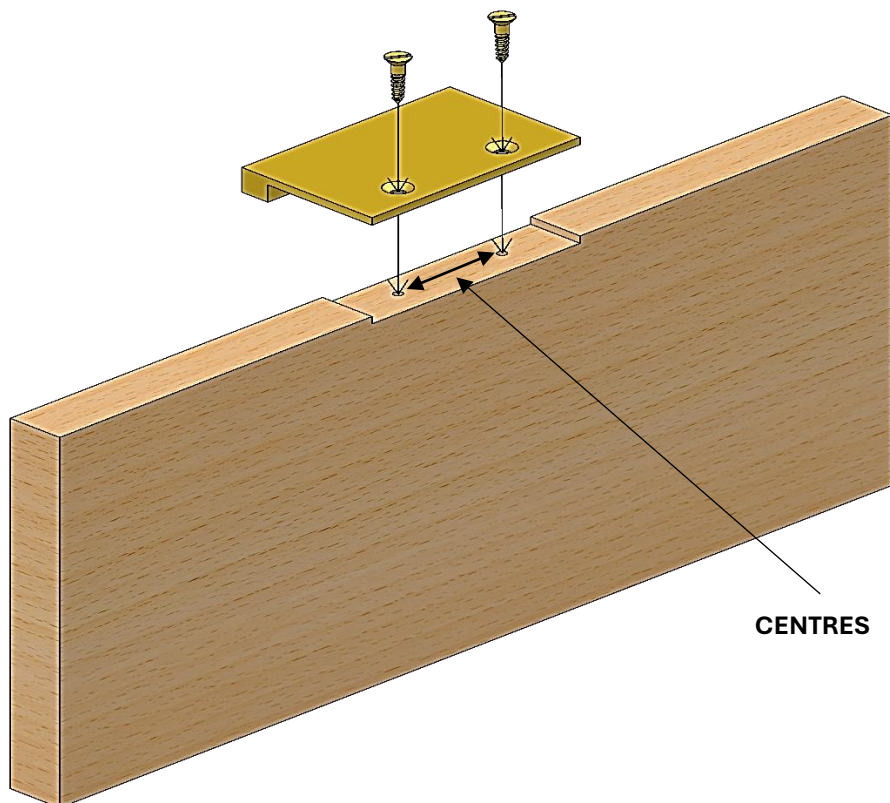


#### 1. Mortise the Edge of the Drawer:

- Decide where you want the product to be fitted.
- Mark out the thickness of the edge pull to determine the depth of the mortise
- Using a mortise or chisel carefully mortise out the recess where the edge pull will sit.
- Check the fit to ensure the correct amount of wood/material has been removed.
- Use fine-grit sandpaper to remove any splintered wood or rough surfaces. This prepares the mortise for any finishing.

2. Drill the Holes:
  - Choose a drill bit that matches the diameter of the screws supplied.
  - Place the edge pull in the mortised recess and mark the centres with a pencil.
  - Drill a hole at the marked position to the same depth as the screws supplied.
3. Fit the Product:
  - Hold the product in place over the marked position.
  - Using a screwdriver, fix the screws through the product and into the cupboard surface.
4. Tighten Securely:
  - Ensure the product is firmly attached but avoid overtightening to prevent damage to the mounting surface.
5. Check & Adjust:
  - Test the product by pulling gently to ensure it is secure.
  - If necessary, loosen, re-position and re-tighten for the best fit.

CONCEALED FIX (Product & Diagram for illustration purposes only)

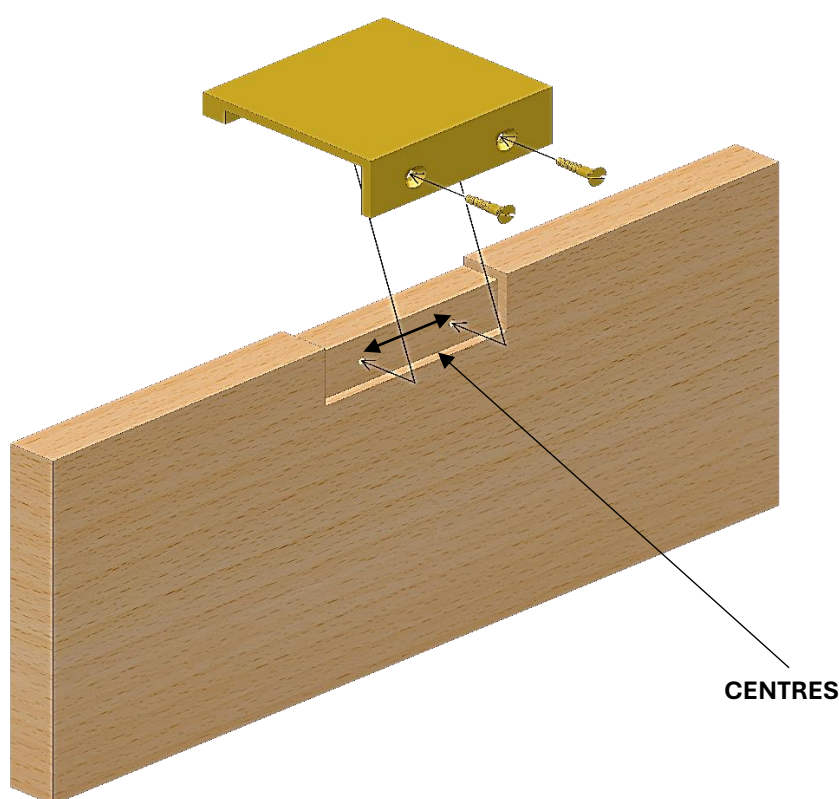

1. Mortise the Edge of the Drawer:
  - Decide where you want the product to be fitted.
  - Mark out the thickness of the edge pull to determine the depth of the mortise on the edge and the rear face of the drawer.
  - Using a mortise or chisel carefully mortise out the recess where the edge pull will sit.
  - Check the fit to ensure the correct amount of wood/material has been removed.
  - Use fine-grit sandpaper to remove any splintered wood or rough surfaces. This prepares the mortise for any finishing.
2. Drill the Holes:
  - Choose a drill bit that matches the diameter of the screws supplied.
  - Place the edge pull in the mortised recess and mark the centres with a pencil.
  - Drill a hole at the marked position to the same depth as the screws supplied.
3. Fit the Product:
  - Hold the product in place over the marked position.
  - Using a screwdriver, fix the screws through the product and into the cupboard surface.

4. Tighten Securely:

- Ensure the product is firmly attached but avoid overtightening to prevent damage to the mounting surface.

5. Check & Adjust:

- Test the product by pulling gently to ensure it is secure.
- If necessary, loosen, re-position and re-tighten for the best fit.

These instructions are to assist in the fitting of your edge pull products. In certain instances, additional carpentry work may be required in order to install your hardware – In these cases it is important to seek professional or expert advice. If you are unsure about any aspect of these instructions please feel free to contact us for further basic guidance, however please be aware that we do not offer a fitting service and we do not accept responsibility for any associated costs incurred in the fitting of these products.

Our terms and conditions of sale can be viewed here: <https://brassart.com/terms-conditions/>